

## Worthington 2V Compressor Bolt Torques

USAGE	THREAD	TORQUE
Adapter to crankcase	1/2-13 UNC	75-80
Ball check valve	1/4-18 NPTF	7-9
Brass Schrader valve	1/8-27 NPT	10-12.5
Brass Schrader valve	1/4-20 NPT	18-20.8
Connecting rod	5/16-24 UNF	12-14
Cylinder assembly to crankcase	3/8-16 UNC	33-37
Cylinder head to crankcase	7/16-14 UNC	50-55
Cylinder liner to valve plate	1/4-28 UNF	14-16
Discharge shutoff valve	1/2-13 UNC	65-70
Discharge valve seat	3/8-24 UNF	22-25
End cover to crankcase	1/2-13 UNC	75-80
Hand hole cover to crankcase	7/16-14 UNC	45-50
Manifold to unloader harness	1/4-20 UNC	10-12
Pump cover plate	1/4-20 UNF	10-12
Pump housing to crankcase	7/16-14 UNC	45-50
Rotor locking screw	5/8-18 UNF	100-105
Seal cover plate	3/8-16 UNC	33-37
Sensing device to hand hole cover	1/4-20 UNC	10-12
Sight glass to hand hole cover	1/4-20 UNC	10-12
Solenoid to hand hole cover	5/16-18 UNC	10-12
Stator locking pin	9/16-18 UNF	snug
Stator locking pin plug	9/16-18 UNF	33-37
Suction filter to end cover	3/8-16 UNC	23-28
Suction shut off valve	5/8-11 UNC	120-130
Terminal box to plate	10-32 UNF	3-4
Terminal plate to adapter	7/16-14 UNC	45-50
Terminal stud to plate	5/16-18 UNC	2-3
Terminal stud to ring terminals	5/16-18 UNC	6-8

Threads are per inch. NPT = National Pipe Thread. Torque = FT-LBS.

UNC = Unified National Coarse. UNF =  
Unified National Fine.

8305 Sovereign Row • Dallas, Texas 75247

(800) 647-2665 tel • (214) 634-8227 fax

[www.dallashermetic.com](http://www.dallashermetic.com)

Compressor Reference 2004